WELD METAL, TOOLS & ACCESSORIES

HANDLE CLAMPS

B-106 & B-107 HANDLE CLAMPS

For most connections involving lugs, cable or rectangular bus, thermOweld® Handle Clamps are used. thermOweld® Handle Clamps make possible the use of many different sizes and types of molds with only two different clamps. The two handle clamps are catalog numbers B-106 and B-107. These will fit 95% of all standard thermOweld®


- 1. Use B-106 clamps for all molds having a price key 4, 7, 17, 22 or 24. These molds are a nominal 3 1/8" wide molds.
- 2. Use B-107 clamps for all molds having a price key 5, 6, 8, 13 or 23. These molds are a nominal 4" wide molds.
- 3. All molds having a price key 2, 3, 9, 10, 11, 12, 14, 15, 16 or 33 have an attached frame; separate handles are not required.

PK-3 MAGNETIC CLAMP

The PK-3 integral magnetic clamp is adaptable to all thermOweld® price key 3 molds. A strong, 55 lb. magnet holds the mold in place and prevents leakage. Works on both cast iron and steel and can be used to weld to both pipe as well as flat surfaces. Designed for remote welding, using our thermOweld® EZ Lite Remote® ignition system. See page 145 for more information.

PK-14 HANDLE ATTACHMENT

The PK-14 Handle Attachment is used to hold a PK-14 molds in position. It is easily attached to the B-106 Handle Clamps. The PK-14 Handle Attachment can be used with weld types CRE-1 and CRE-4.

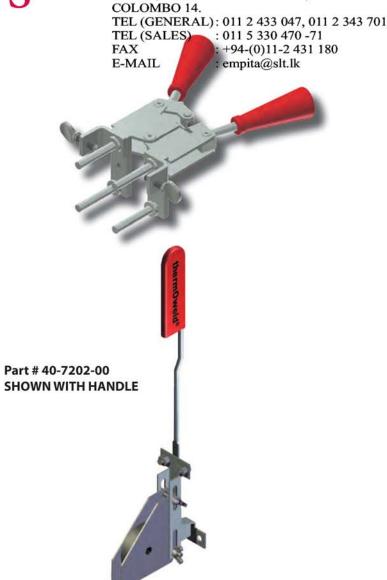

EMPIRE TRADING AGENCY No. 110, LAYARDS BROADWAY,

MOLD SUPPORT CLAMP

The Mold Support Clamp is used to hold a mold in position on a vertical steel column or angle. It is easily attached to the Handle Clamps. The Mold Support Clamp can be used with weld types CS-3, CS-18, CS-23 and CS-27.



